

WIRELESS CONTROLLER SETUP

The handheld transmitter(s) and hoist receivers must be “paired” or “coded” to work with each other. This operation IS necessary any time either device is replaced.

The following operations should be prepared before coding either device:

1. Disconnect (unplug) the power supply of the receiver.
2. Remove the battery of the transmitter.

To configure a new transmitter to work with an existing hoist receiver, follow these steps:

1. Press and hold the "up" button and "stop" button, insert the batteries into the battery compartment of the transmitter. Wait for the red LED light of the transmitter to begin to flash rapidly. Then release the buttons.
2. Plug in the receiver to the power supply. The red LED light of the transmitter will change from fast flash to slow flash.
3. At this time, the transmitter and receiver are in the state of code allocation.
4. To send the receiver code and channel number back to the transmitter, simply press the "DOWN" key to complete the coding operation.
5. After successful coding, the LED green light of the emitter flashes once
6. The lift should now be operational.

To configure a new hoist receiver to work with an existing transmitter, follow these steps:

1. Press and hold the "up" button and "stop" button, insert the batteries into the battery compartment of the transmitter. Wait for the red LED light of the transmitter to begin to flash rapidly. Then release the buttons.
2. Plug in the receiver to the power supply. The red LED light of the transmitter will change from fast flash to slow flash.
3. At this time, the transmitter and receiver are in the state of code allocation.
4. To send the transmitter encoding and channel number to the receiver, simply press the "UP" key to complete the coding operation.
5. After successful coding, the LED green light of the emitter flashes once
6. The lift should now be operational.